


Back of Kite

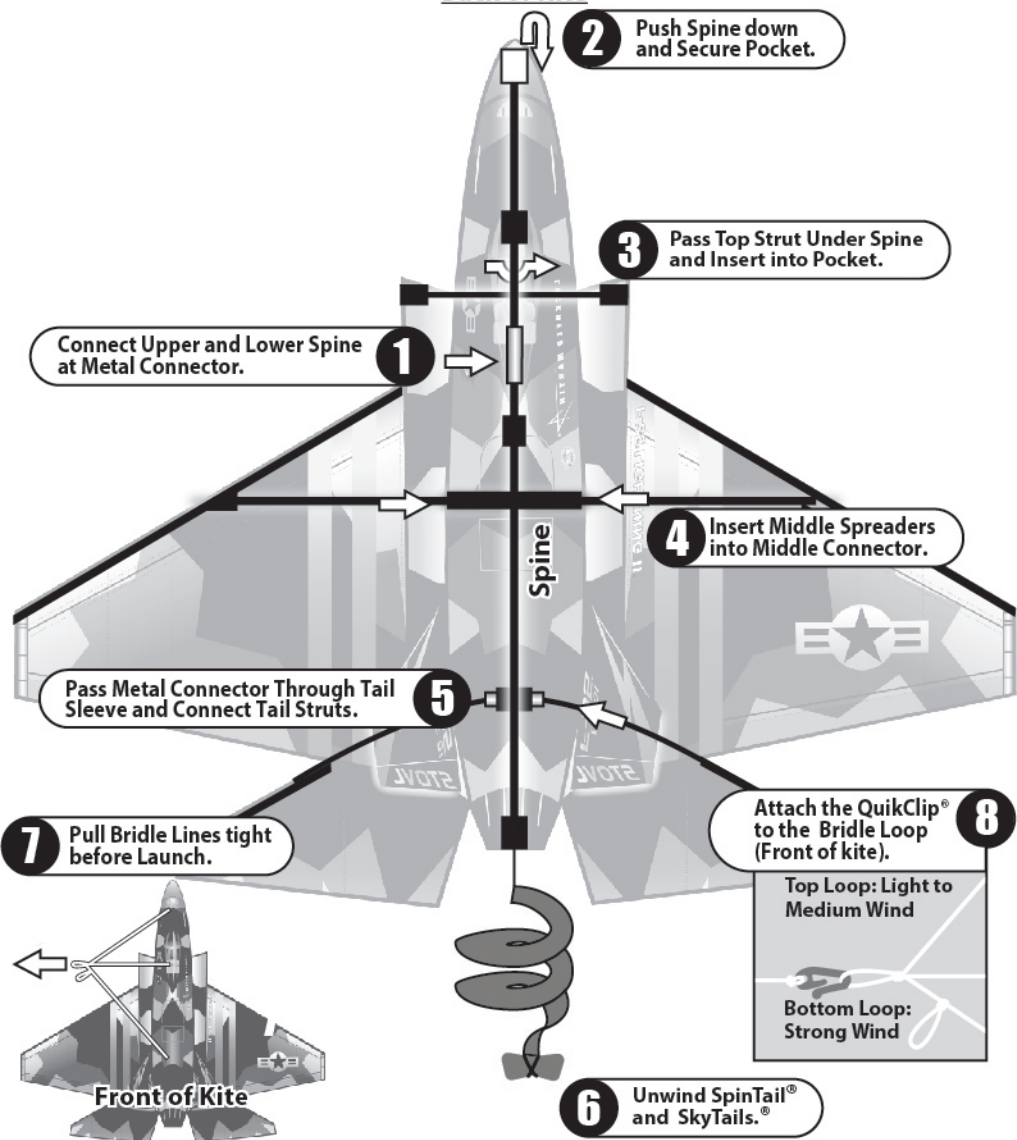

1 Connect Upper and Lower Spine at Metal Connector.

2 Push Spine down and Secure Pocket.

3 Pass Top Strut Under Spine and Insert into Pocket.

4 Insert Middle Spreaders into Middle Connector.

5 Pass Metal Connector Through Tail Sleeve and Connect Tail Struts.

8 Attach the QuikClip® to the Bridle Loop (Front of kite).

Top Loop: Light to Medium Wind

Bottom Loop: Strong Wind

6 Unwind SpinTail® and SkyTails®.

7 Pull Bridle Lines tight before Launch.

Front of Kite

LAUNCHING - ASSISTED LAUNCH

- The kite requires a minimum wind of 7 mph / 11.3 kph. Let out approximately 75 feet / 22.9 m of line and have an assistant hold the kite.
- With your back to the wind, release the kite and take a few steps backwards, the kite will rise into the air. Tug line to gain altitude, let out line to gain distance.
- For storage, reverse assembly steps and place into package. Store your kite in a cool dry place. Excessive heat and/or sunlight can damage the package and kite.

RITE SAFETY

WARNING! Do not fly near overhead power lines.
WARNING! Do not use near overhead power lines or during thunderstorms.
WARNING! Not suitable for children under 3 years due to small parts.
WARNING! Not suitable for children under 3 years due to long cord.
 Please remove all packaging material before giving the toy to child.
 Keep important information for future reference.

Never fly near overhead power lines.
 Never fly near your local power company for assistance.
 Never fly over people.
 Never fly in thunderstorms.
 Never fly near busy streets.