



## LAUNCHING - ASSISTED LAUNCH

- The kite requires a minimum wind of 5 mph / 8.04 kph. Let out approximately 75 feet / 22.9 m of line and have an assistant hold the kite.
- With your back to the wind, release the kite and take a few steps backwards, the kite will rise into the air. Tug line to gain altitude, let out line to gain distance.
- For storage, reverse assembly steps and place into package. Store your kite in a cool dry place. Excessive heat and/or sunlight can damage the package and kite.

## KITE SAFETY

- |   |  |   |
|---|--|---|
| <p><b>WARNING!</b> Do not fly near overhead power lines.</p> <p><b>WARNING!</b> Do not use near overhead power lines or during thunderstorms.</p> <p><b>WARNING!</b> Not suitable for children under 3 years due to small parts.</p> <p><b>WARNING!</b> Not suitable for children under 3 years due to long cord.</p> <p>Please remove all packaging material before giving the toy to child.</p> <p>Keep important information for future reference.</p> | <p>Never fly near an airport.</p> <p>Never fly over people.</p> <p>Never fly in thunderstorms.</p> <p>Never fly near busy streets.</p> | <p>Never fly near overhead power lines.</p> <p>Never try to retrieve your kite from power lines.</p> <p>Call your local power company for assistance.</p> |
|---|--|---|