



Front of Kite

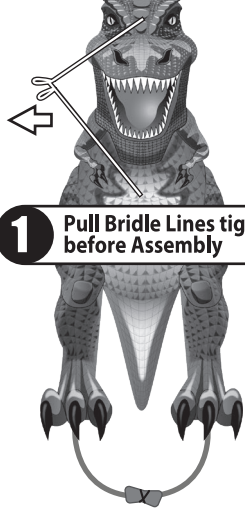

1 Pull Bridle Lines tight before Assembly

Back of Kite

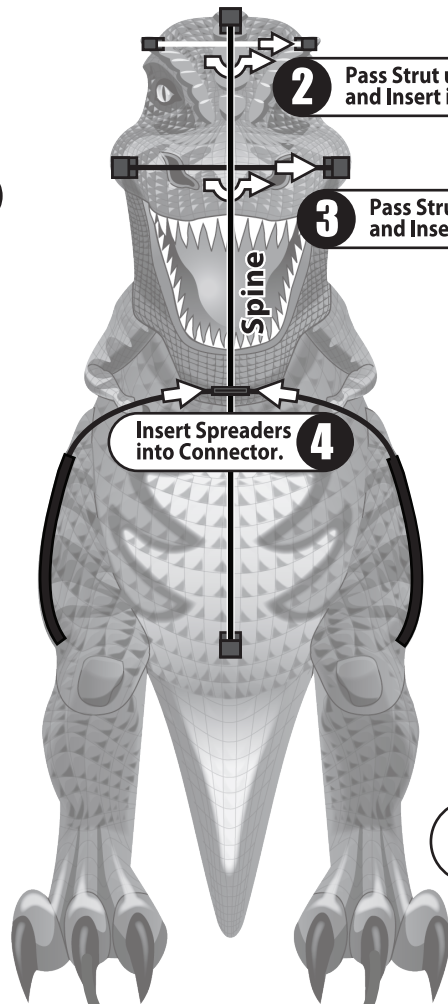

2 Pass Strut under Spine and Insert into Pocket.

3 Pass Strut under Spine and Insert into Pocket.

4 Insert Spreaders into Connector.

5 Attach the QuikClip® to the Bridle Loop (Front of kite).

Top Loop: Light to Medium Wind

Bottom Loop: Strong Wind

Unwind U-Tails. **4**

LAUNCHING - ASSISTED LAUNCH

- The kite requires a minimum wind of 7 mph / 11.3 kph. Let out approximately 75 feet / 22.9 m of line and have an assistant hold the kite.
- With your back to the wind, release the kite and take a few steps backwards, the kite will rise into the air. Tug line to gain altitude, let out line to gain distance.
- For storage, reverse assembly steps and place into package. Store your kite in a cool dry place. Excessive heat and/or sunlight can damage the package and kite.

KITE SAFETY

WARNING! Do not fly near overhead power lines.
 WARNING! Do not use near overhead power lines or during thunderstorms.
 WARNING! Not suitable for children under 3 years due to small parts.
 WARNING! Not suitable for children under 3 years due to long cord.
 Please remove all packaging material before giving the toy to child.
 Keep important information for future reference.

Never fly near an airport.
 Never fly over people.
 Never fly in thunderstorms.
 Never fly near busy streets.


Never fly near overhead power lines.
 Never try to retrieve your kite from power lines.
 Call your local power company for assistance.

Devant du Cerf-volant



1 Tirez sur les Lignes de la Bride avant le Lancement.

Dos du Cerf-volant

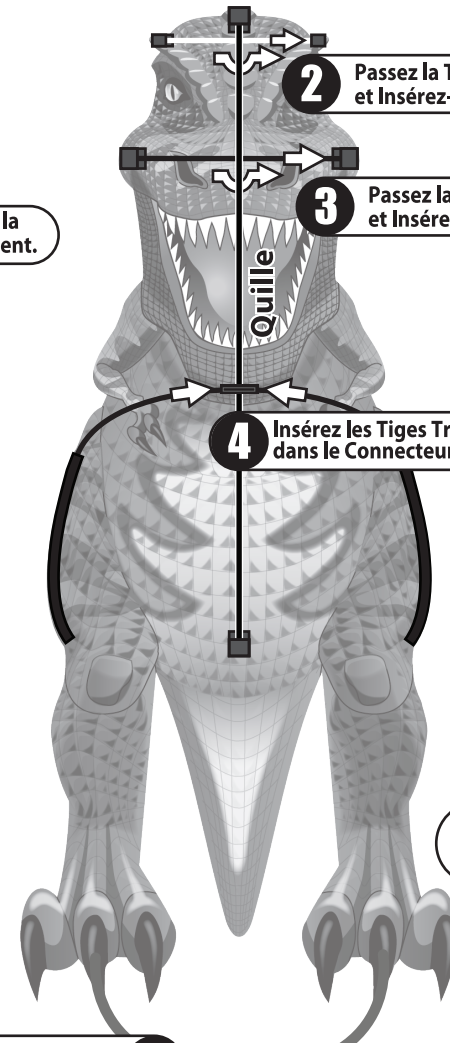

2 Passez la Traverse sous la Quille et Insérez-la dans la Poche.

3 Passez la Traverse sous la Quille et Insérez-la dans la Poche.

4 Insérez les Tiges Transversales dans le Connecteur.

5 Attachez le QuikClip® à la boucle de la bride (Devant du cerf-volant).

Boucle du Haut : Vents Légers à Moyens

Boucle du Bas : Vents Forts

Déroulez les Queues en forme de U. **4**

LANCEMENT - LANCEMENT ASSISTÉ

- Le cerf-volant exige un vent d'au moins 11,3 km/h / 7 m/h. Déroulez environ 22,9 m / 75 pi de ligne et demandez à un assistant de tenir le cerf-volant.
- Placez-vous le dos au vent, relâchez le cerf-volant et reculez de quelques pas, le cerf-volant s'envolera. Tirez sur la ligne pour prendre de l'altitude, relâchez la ligne pour augmenter la distance.
- Pour le rangement, reprenez les étapes de montage à l'envers et replacer dans le paquet. Rangez le cerf-volant dans un endroit sec et frais. La chaleur extrême et le soleil peuvent endommager l'emballage et le cerf-volant.

CONSIGNES DE SÉCURITÉ

AVERTISSEMENT! Ne jamais faire voler près des lignes électriques.
 AVERTISSEMENT! Ne jamais faire voler près des lignes électriques ou ne jamais faire voler pendant les orages.
 AVERTISSEMENT! Non approprié aux enfants au moins de 3 ans dû à de petites pièces.
 AVERTISSEMENT! Non approprié aux enfants au moins de 3 ans dû à la longue corde.
 Veuillez retirer tout le matériel d'emballage avant de donner le jouet à l'enfant.
 Garder l'information importante pour future référence.

Ne jamais faire voler près d'un aéroport.
 Ne jamais faire voler au-dessus des gens.
 Ne jamais faire voler pendant les orages.
 Ne jamais faire voler près de rues encombrées.

Ne jamais faire voler près des lignes électriques.
 N'essayez pas de récupérer un cerf-volant pris dans le linges électriques.
 Appelez la compagnie d'électricité pour obtenir de l'aide.