

ASSEMBLY INSTRUCTIONS


Mermaid

Back of Kite

1 Insert Spreaders into Wing pockets.

2 Insert Spreaders into Connector Left & Right.

1 Insert Spreaders into Wing Pockets.

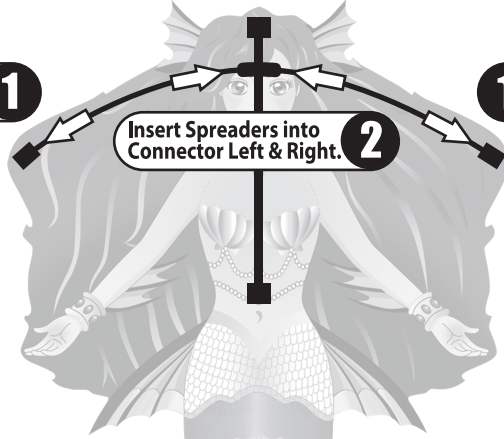


Front of Kite

4 Pull Bridle Lines tight before Launch.

3 Unwind both SkyTails® Left and Right.

6 In stronger winds, tie SkyTails® together for more stability.

5 Attach the QuikClip® to the Bridle Loop (Front of Kite).

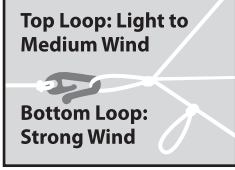

LAUNCHING - ASSISTED LAUNCH

- The kite requires a minimum wind of 7 mph / 11.3 kph. Let out approximately 75 feet / 22.9 m of line and have an assistant hold the kite.
- With your back to the wind, release the kite and take a few steps backwards, the kite will rise into the air. Tug line to gain altitude, let out line to gain distance.
- For storage, reverse assembly steps and place into package. Store your kite in a cool dry place. Excessive heat and/or sunlight can damage the package and kite.

KITE SAFETY

WARNING! Do not fly near overhead power lines.
 WARNING! Do not use near overhead power lines or during thunderstorms.
 WARNING! Not suitable for children under 3 years due to small parts.
 WARNING! Not suitable for children under 3 years due to long cord.
 Please remove all packaging material before giving the toy to child.
 Keep important information for future reference.

Never fly near an airport.
 Never fly over people.
 Never fly in thunderstorms.
 Never fly near busy streets.

Never fly near overhead power lines.
 Never try to retrieve your kite from power lines.
 Call your local power company for assistance.

INSTRUCTION DE MONTAGE


Sirène

Dos du Cerf-volant

1 Insérez les Tiges Transversales dans les Poches d'Aile.

2 Insérez les Tiges Transversales dans le Connecteur Gauche et Droite.

1 Insérez les Tiges Transversales dans les Poches d'Aile.

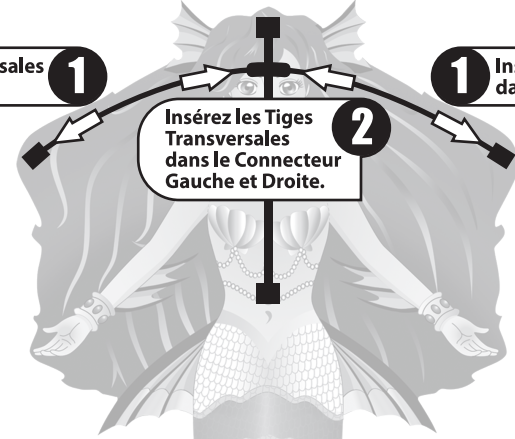


Devant du Cerf-volant

4 Tirez sur les Lignes de la Bride avant le Lancement.

3 Déroulez les SkyTails® Gauche et Droite.

6 Par vents forts, attachez les SkyTails® ensemble pour plus de stabilité.

5 Attachez le QuikClip® à la Boucle de la Bride (Devant du Cerf-volant).

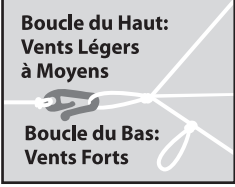

LANCEMENT - LANCEMENT ASSISTÉ

- Le cerf-volant exige un vent d'au moins 7 m/h / 11.3 km/h. Déroulez environ 75 pi / 22.9 m de ligne et demandez à un assistant de tenir le cerf-volant.
- Placez-vous le dos au vent, relâchez le cerf-volant et reculez de quelques pas, le cerf-volant s'envolera. Tirez sur la ligne pour prendre de l'altitude, relâchez la ligne pour augmenter la distance.
- Pour le rangement, reprenez les étapes de montage à l'envers et replacez dans le paquet. Rangez le cerf-volant dans un endroit sec et frais. La chaleur extrême et le soleil peuvent endommager l'emballage et le cerf-volant.

SÉCURITÉ DU CERF-VOLANT

AVERTISSEMENT! Ne jamais faire voler près des lignes électriques.
 AVERTISSEMENT! Ne jamais faire voler près des lignes électriques ou ne jamais faire voler pendant les orages.
 AVERTISSEMENT! Non approprié aux enfants au-dessous de 3 ans dû à de petites pièces.
 AVERTISSEMENT! Non approprié aux enfants au-dessous de 3 ans dû à la longue corde.
 Veuillez retirer tout le matériel d'emballage avant de donner le jouet à l'enfant.
 Garder l'information importante pour la future référence.

Ne jamais voler près d'un aéroport.
 Ne jamais voler au-dessus des gens.
 Ne jamais voler pendant les orages.
 Ne jamais faire voler près de rues encombrées.

Ne jamais faire voler près des lignes électriques.
 N'essayez pas de récupérer un cerf-volant pris dans les lignes électriques.
 Appeler la compagnie d'électricité pour obtenir de l'aide.