




1. Connect Spine at Metal Connector.

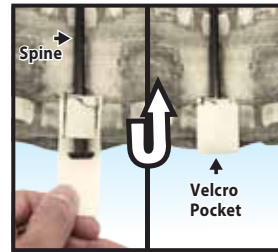


2. Push up Spine and secure Velcro Pocket.

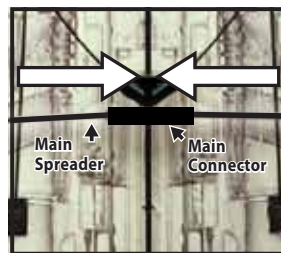



3. Insert Main Spreaders, left and right, into the Main Connector.

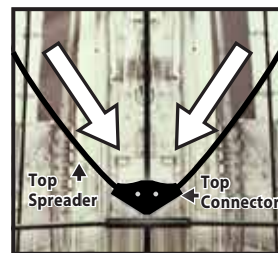

4. Insert Top Spreaders, left and right, into the Top Connector.

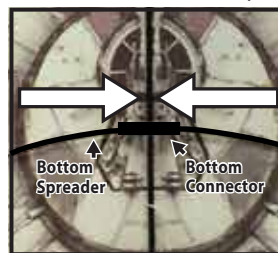

5. Insert Bottom Spreaders, left and right, into the Bottom Connector.

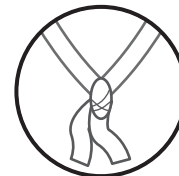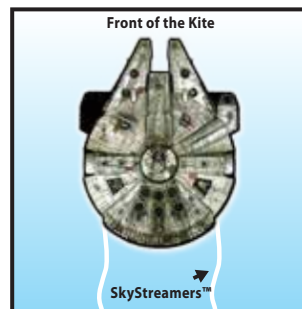

7. Unwind SkyStreamers™ and for more stability, tie them together.

8. Attach the QuikClip® to Bridle Loop. Top Loop for light to medium winds, Bottom Loop for strong winds.

